




## **Spectrum Genius Essence Mobile Plus Application:**

How to take a Single Measurement,  
Save Your Measurement and also upload it to the Spectrum  
Genius Cloud Services

# Step 1 - Taking A Single Measurement

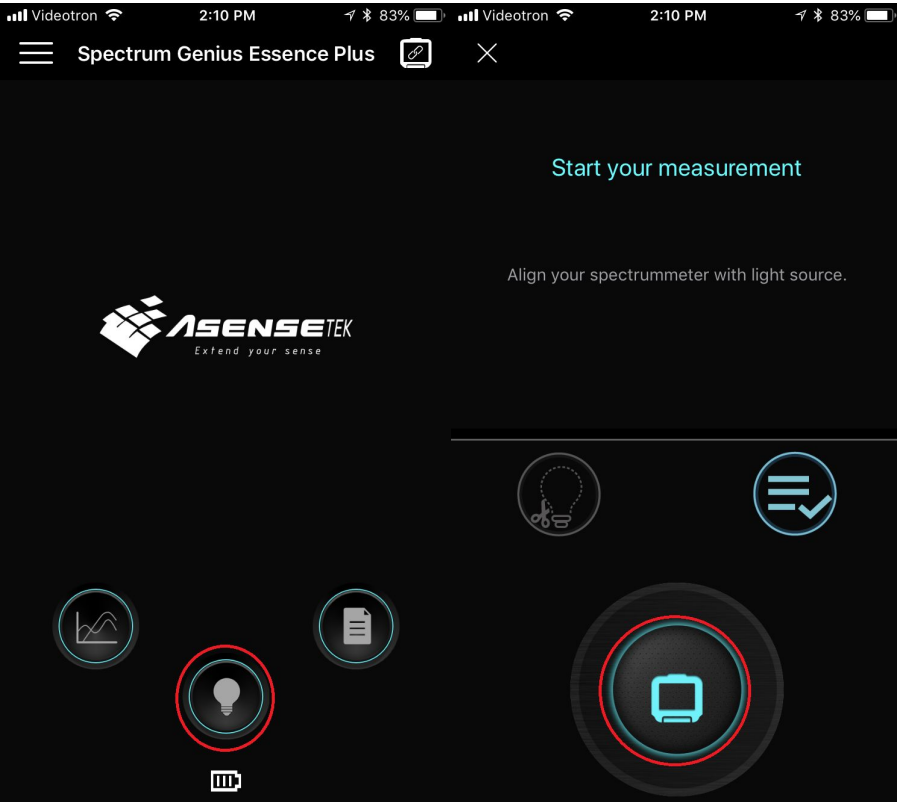


In order to take a single measurement, click, the light bulb icon.

Then Click, the Lighting Passport Button to take a measurement.

\*Make sure the shutter to the sensor is open.  
(Black = Closed, White = Open)

# Step 2 - Saving Your Measurement

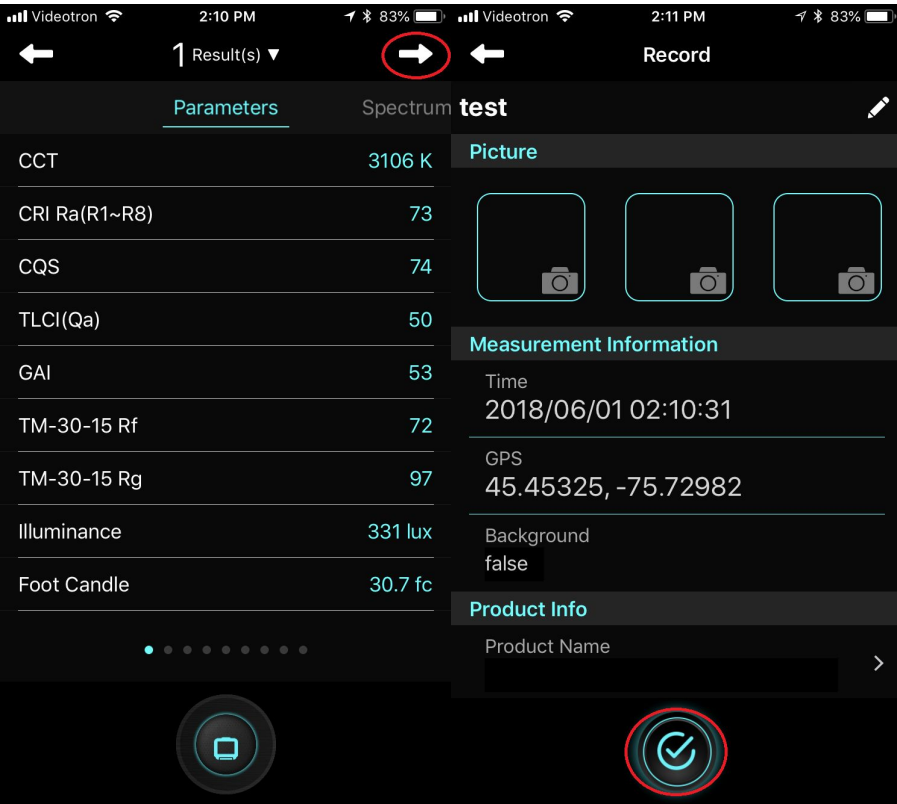

Once you have measured your light source. You'll be able to analyze each parameter.

You'll want to click the Arrow in the top right of your screen..

Then, Add a picture, Edit the product name, etc.

Click the Check Mark Button at the bottom. It will automatically be saved into your cloud service account on [www.spectrumgenius.com](http://www.spectrumgenius.com)

# Step 3 - Using the Cloud Service



About Us News FAQ Contact Knowledge Mobile App English [Login/Sign up](#)

Scenario



MOST POPULAR

This Week All-time



English

Login to your account

Email

Password

Log in

Forgot your password ?

Click [here](#) to reset your password.

Don't have an account yet ?

[Create an account](#)

2017 © Asensetek Inc. - Extend your sense



Go to  
Spectrumgenius.com  
and click Login

Enter your email and  
password

Click “Log in”

\*Create an account if  
you don't already have  
one

# Step 3 - Using the Cloud Service

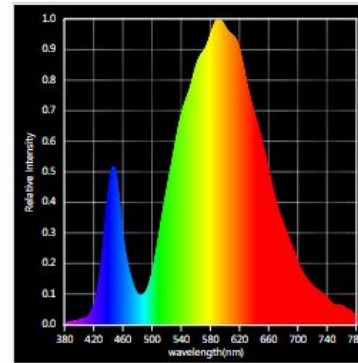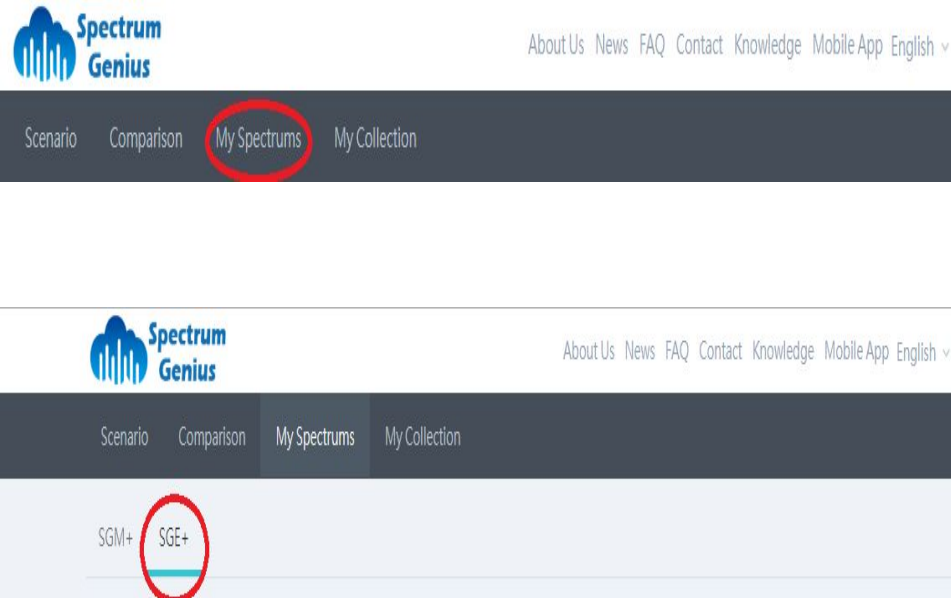

test

When you are Logged in you will need to go to “My Spectrums”

Make sure you are on the SGE+ Folder

You should see the name of the measurement record you want to see, in this case the name is “test”.


# Step 3 - Using the Cloud Service

test

Overview Measurements Statistical

Delete Edit Edit Photo Share Download Export Report

## MEASUREMENT INFORMATION

Record Name	test
Time	2018-06-02 02:10:31(Time-zone GMT+8)
GPS	45.45325, -75.72982 (Canada,Québec) 
Continuous	Off
Background	Off

When you click the measurement record you want to see, you will be able to download it, share it and export it the report.

The next page is an example of when you export a report.

# Step 4 - Viewing Your Report.

